



# How to change the laces step by step

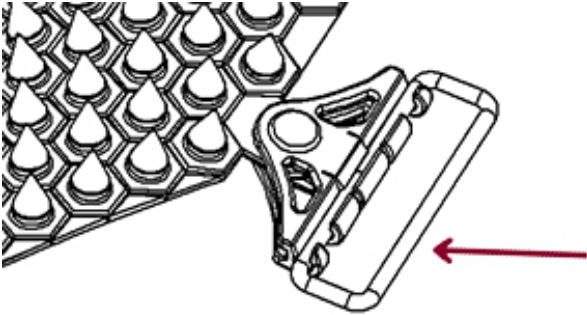


To change the laces, the 4 rectangular buckles must be changed.

## ASSEMBLY

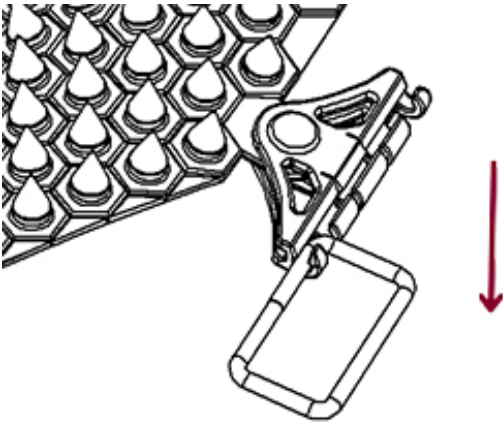


### Step 1

Attach the buckle to one of the side hooks with slight pressure.

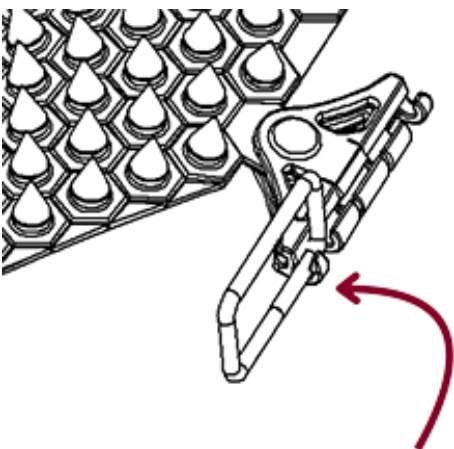


### Step 2

Rotate the buckle upwards to align it with the opening on the clip.

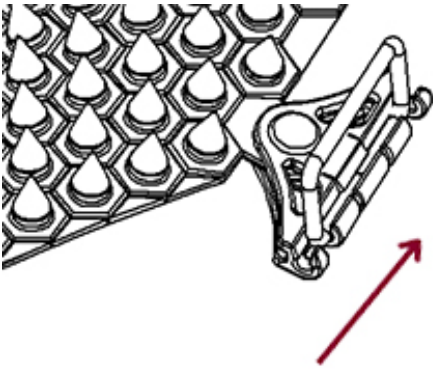


### Step 3

Slide the buckle along the rotation axis until it is in the correct position to be rotated.

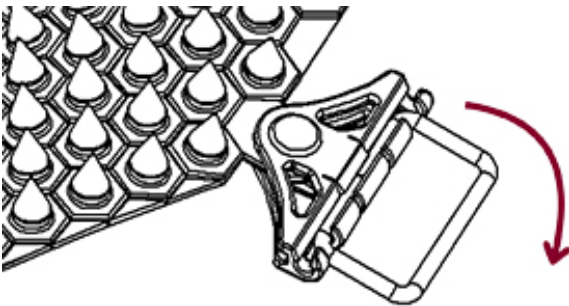

### Step 4

Rotate the buckle downwards without forcing it. If the buckle is difficult to rotate, check that it is well aligned.

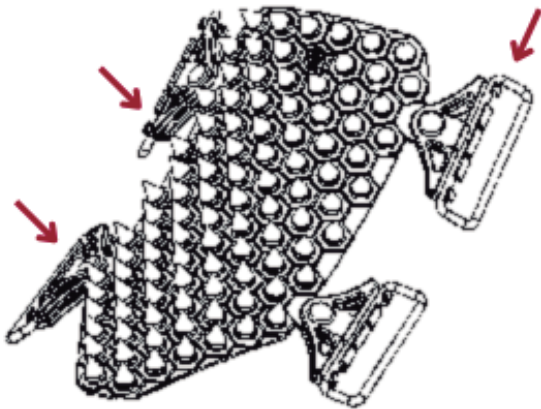


### Step 5

Repeat the same operation for the remaining three buckles.

## DISASSEMBLY


### Step 1

Rotate the buckle upwards to align it with the opening on the clip.

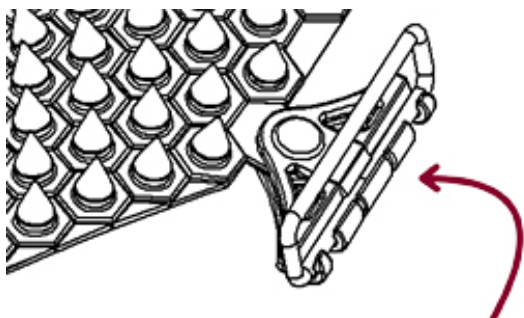


### Step 2

Slide the buckle along the rotation axis until it is released.

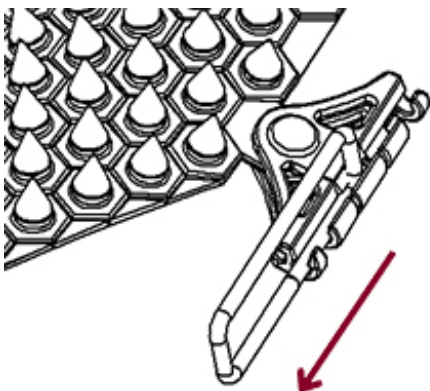

### Step 3

Repeat the same operation for the remaining three buckles.

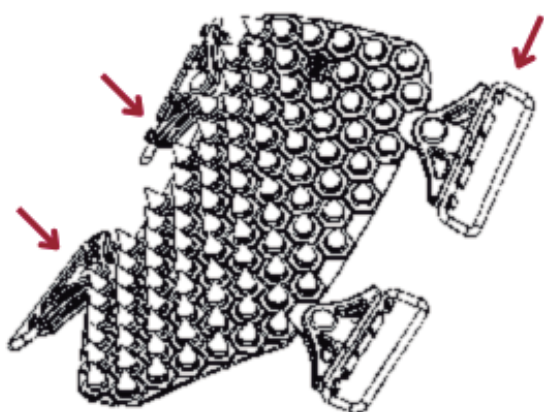

- If you encounter any difficulties or have questions, [contact us](#).